


3 Channel RS232/ USB Relay

Only highlighted connections needed for RS232 Version
No pins required for USB Version

WARNING: Line voltage can kill! Use caution when working with electricity

RS232 Settings: 115200N81
Commands: ON[1..3]/OFF[1..3]

- +12V
- ADC (Future)
- PC_RX
- PC_TX
- GPIO5 (Future)
- GPIO4 (Future)
- +3.3V
- GND

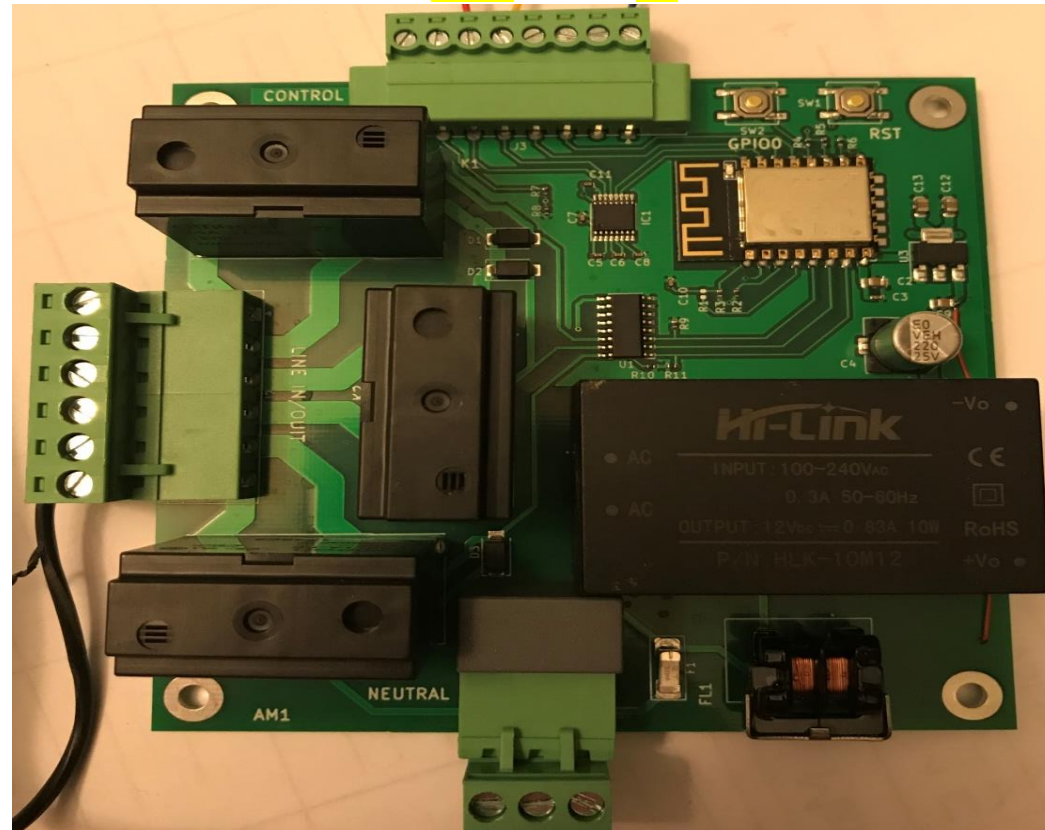

- Hot Out 1
- Hot In 1
- Hot Out 2
- Hot In 2
- Hot Out 3
- Hot In 3

Also feeds Local 12V

Neutral
All tied together